




## Door installation

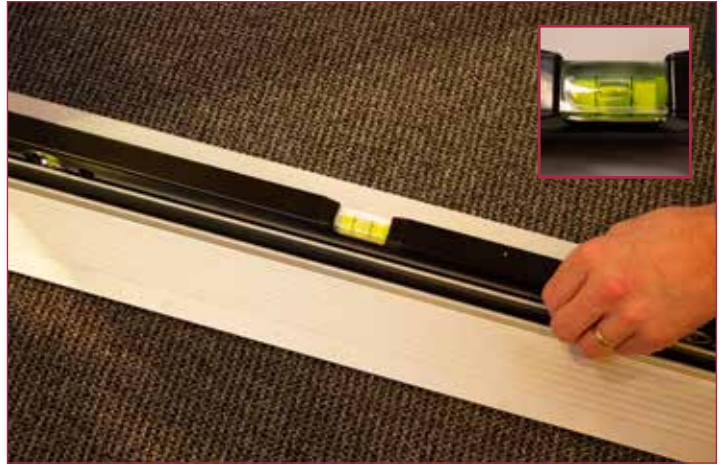



The frame in the hinge side and bottom frame must be plumb and level.  
Air/clearance between sash and frame must be the same all the way around.




**Beware**  
Mounting screws must be large headed and placed in or as close to the hinges as possible.

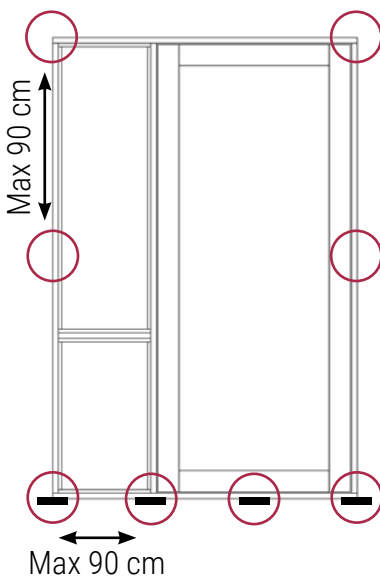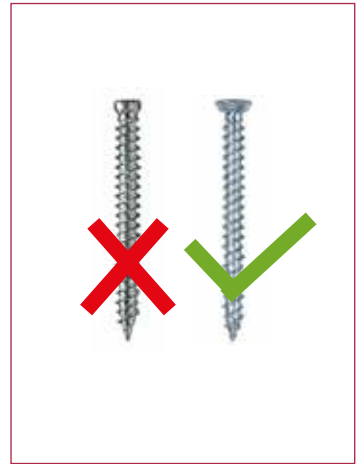

Supporting blocks must be fitted under sideframes and mullions and behind all mounting screws.

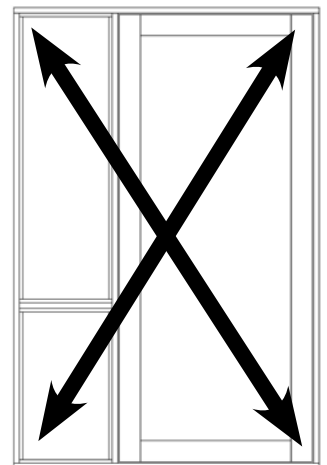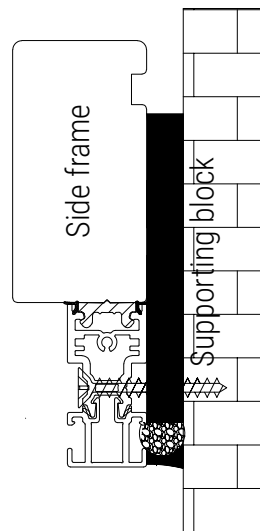

When the frame is fastened, take a cross measurement. Both measurements must be the same.

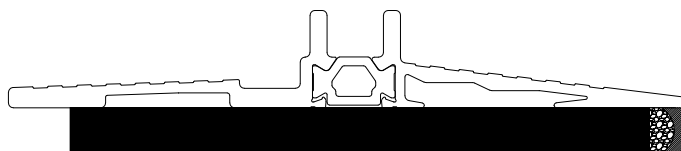


Supporting block

## Door adjustment



Is your doorlock working? If in doubt, open the door and activate the handle - see if all locking points come out. If the handle is tight when closing the door and activating the lockings points, it may need adjustment or lubrication. You might have to adjust between the summer and winter period. Loosen the screws in the inserts and move in or out as needed.

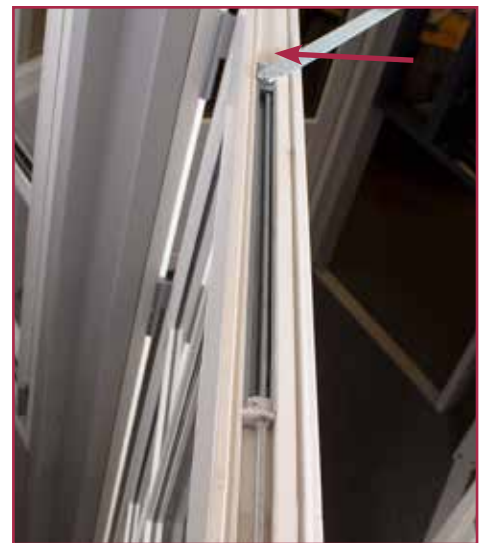

Clean and lubricate moving parts. Use a suitable acid-free oil. This should be done as needed, but at least once a year.