


1. To install the glazing bead, Fig. 1: tap in the direction of the arrow.

2. To remove the glazing bead, place a block as shown in Fig. 2 and tap in the direction of the arrow.

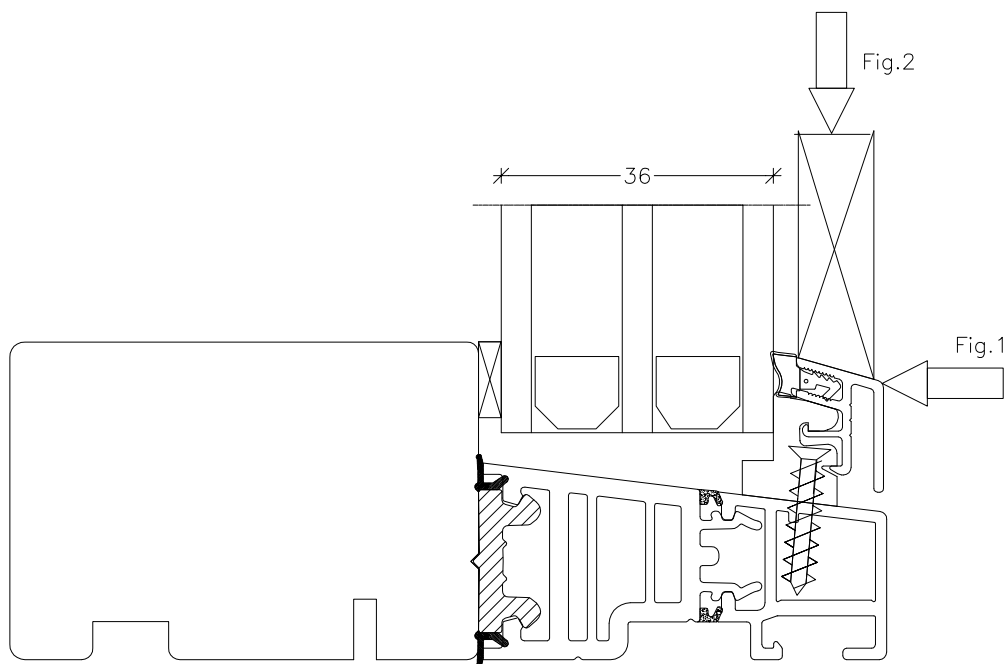

INFO:

When installing glazing beads, spray the glass and rubber sealing with soapy water.

When both removing and attaching, you must tap the entire length of the glazing bead before it loosens or attaches.

Subject: Sectional detail - bottom frame  
Mounting glazing bead  
Removing glazing bead

TEGN.NR.: SIGN.: DDK

DATO: 06-12-2017 REV.NR.: 1 MÅL.: 1.1

**Unik**  **Funkis**

VINDUER & DØRE A/S  
Livøvej 10b 8800 Viborg tlf. 86621888