

Quick guide to changing handles

To change the handle, use a screwdriver or an electric screwdriver with Torx 20 bit.
Be aware, do not overtighten screws.

①

Close the window and remove the screws. Once both screws are out, pull the handle out, it might bind a little, so hold on tight and wiggle it loose.



②

After pulling out the handle, push the new one into place. Push it all the way in and hold it so that the holes on the handle and frame align. Screw in the first screw almost all the way, and then the other. Then tighten both screws.



③

If there is a lock on the handle, move it from the old handle and place it over the new one. Remember, always test the handle after you have replaced it.

