

## QUICK GUIDE INSTALLING BALCONY DOORS

**THIS QUICK GUIDE IS A SUPPLEMENT AND NOT A REPLACEMENT FOR THE INSTALLER AND USER MANUAL**


**[www.unikfunkis.dk/en/technical-data/instructions](http://www.unikfunkis.dk/en/technical-data/instructions)**

1

The first step is to prepare where the element is to be installed.

The surface must be:

- dry (moisture resistant)
- Stable
- Should be able to support the weight of the element.

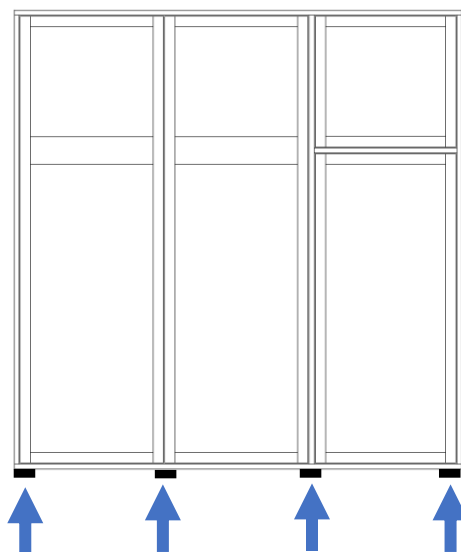


**SUPPORTING BLOCKS MUST BE WATER AND PRESSURE RESISTANT**

Supporting blocks **MUST** be fitted:


- Under sideframes and mullions.
- Centre under the bottom frame
- Generally there should be no more that 90 cm between each supporting block. The bottom frame and supporting blocks underneath must be 100% level.

2


THE SUPPORTING BLOCKS MUST BE PLACED as shown on the different threshold types below. The threshold and supporting blocks underneath must be 100% level.

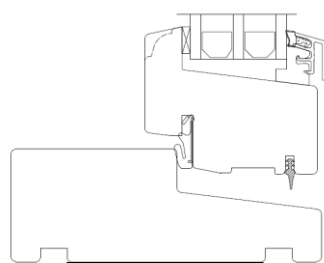

SUPPORTING BLOCK

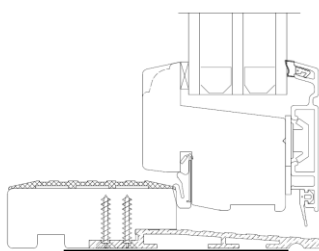


SUPPORTING BLOCK

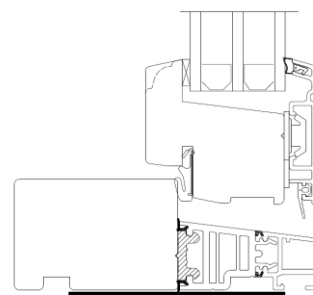

SUPPORTING BLOCK

3

The frame in the hinge side and bottom frame must be plumb and level.  
Air/clearance between sash and frame must be the same all the way around.

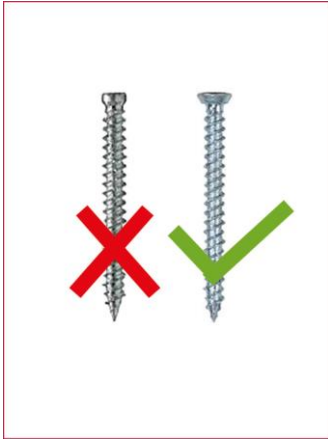



### Beware

Mounting screws must be large headed and placed in or as close to the hinges as possible.



4

Supporting blocks must be placed behind all mounting screws.

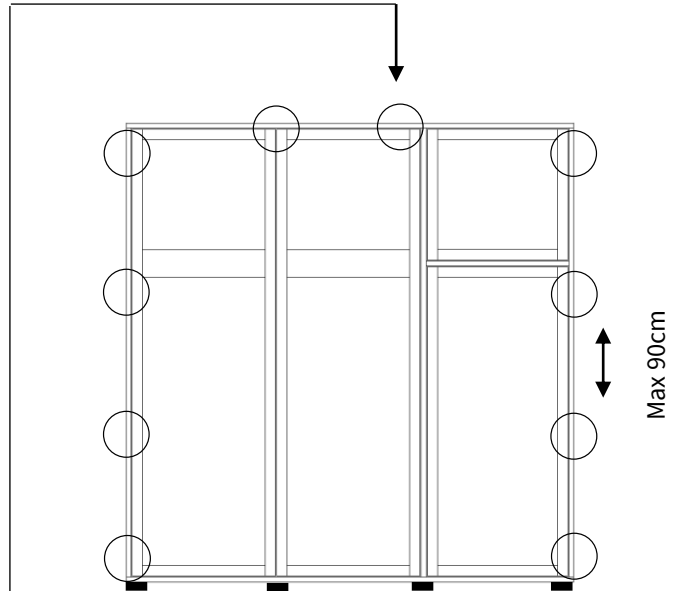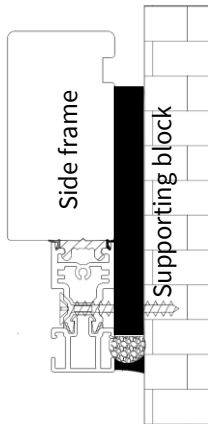

At the mullion, the mounting screw must be placed as close to the hinge as possible.



Mounting points — ○